



ELECTRIC MACHINES – UNILAB – 1 kW



STARTING AND SYNCHRONIZATION UNIT



DL 1026RHD3

Starting rheostat for the three-phase synchronous machines and excitation device for the synchronization with the mains.

STAR/DELTA STARTER



DL 2035

Star/delta starter for the three-phase squirrel-cage induction motors

POLE CHANGING UNIT



DL 2036

Switch to change the number of poles in Dahlander type motors.

CAPACITOR UNIT



DL 1028AC

Set of capacitors for either starting or steady-state running of the split-phase motor.

RESISTOR UNIT



DL 1028AR

Auxiliary resistor for the starting of the split-phase motor.

INDUCTOR UNIT



DL 1028AL

Auxiliary inductor for the starting of the split-phase motor.